

Features of Your Remote Control

To use most of the features described in this section, make sure you are in **SAT mode** by pressing the **SAT Mode** button

Note: To control a TV, VCR, or other available component, the remote must be programmed. See the User's Guide for details.

SAT Mode
Press to control your satellite receiver, TV power, volume and mute

TV Mode
Press to control your TV

VCR Mode
Press to control your VCR or DVD player

AUX Mode
Press to control other programmed components such as a DVD player

Receiver & TV Power
Top button turns the receiver on/off, bottom button turns the TV on/off

Menu
Access receiver features and settings

Themes
Search for programs using Themes

Recall
Go back to last channel viewed

Info
Get program information

VCR/DVD Buttons
Operates some VCR or DVD players (VCR or AUX Mode)

Recover
Recovers satellite programming if your TV input or channel has changed

Number Buttons
Enter a channel number or select menu items

Format
Changes the picture to the desired width to match the program you are viewing

Page Buttons
Page up/down in menus and display options

Program Guide
Displays current and future program listings and information

Arrows/Select Buttons
Channel up/down, move through menus/guides and select options

Browse
See what is on other channels while watching TV

View Satellite Program
Exit any menu/guide and go back to watching a program

DISH
Explore interactive TV features

Search
Search for a program

Note: Your remote may look slightly different

Device Codes:

TV: _____ 1*
(optional)

VCR: _____ 1*
(optional)

AUX: _____ 1*
(optional)

My remote is programmed in Limited Mode (check box):

***Tip:** Using the Limited Mode option (adding "1" when programming the remote) helps prevent you from accidentally tuning to a TV or VCR channel (or input) that does not display satellite TV programming. See User's Guide for details.