

Off-Air High Definition



Digital broadcasts (including HDTV programming) may be available in your area using an off-air antenna. You can receive these broadcasts using your receiver.

What you need to know:

- Off-air broadcasts require an off-air antenna (contact a local retailer or go to antennaweb.org for antenna requirements in your area).
- Not all digital off-air broadcasts are in high definition.
- Local off-air channels can be displayed and selected from the Program Guide. Local program information for these off-air channels is only available with a subscription to DISH Network local programming.
- Additional authorization may be required before high definition programming and/or off-air digital broadcasts can be viewed; additional fees may apply.

Using the Recover Button

Use the Recover button to get back to watching satellite programming if you accidentally change channels or inputs on your TV

1



Press and hold the RECOVER button until all mode buttons light up.

2



If you see this System Information screen, proceed to step 4. Otherwise, continue to step 3.

3



Press the RECOVER button again & wait until the mode lights stop flashing. If you see the System Information screen, go to step 4. If not, repeat this step until you do.

4



Press the SELECT button (to choose Done).

Interactive TV



Watch video from popular news, entertainment, and sports networks all on one screen.



Select an icon for customer support, news, shopping, sports, games and entertainment.

Learning More & Getting Help

Tune to DISH Network
FYI Channel 101



dishnetwork.com



Press  and select



For details on how to get the most out of your new DISH Network satellite receiver, see the *User's Guide*.

